


INSTALLATION MANUAL

GAS TANK REPLACEMENT

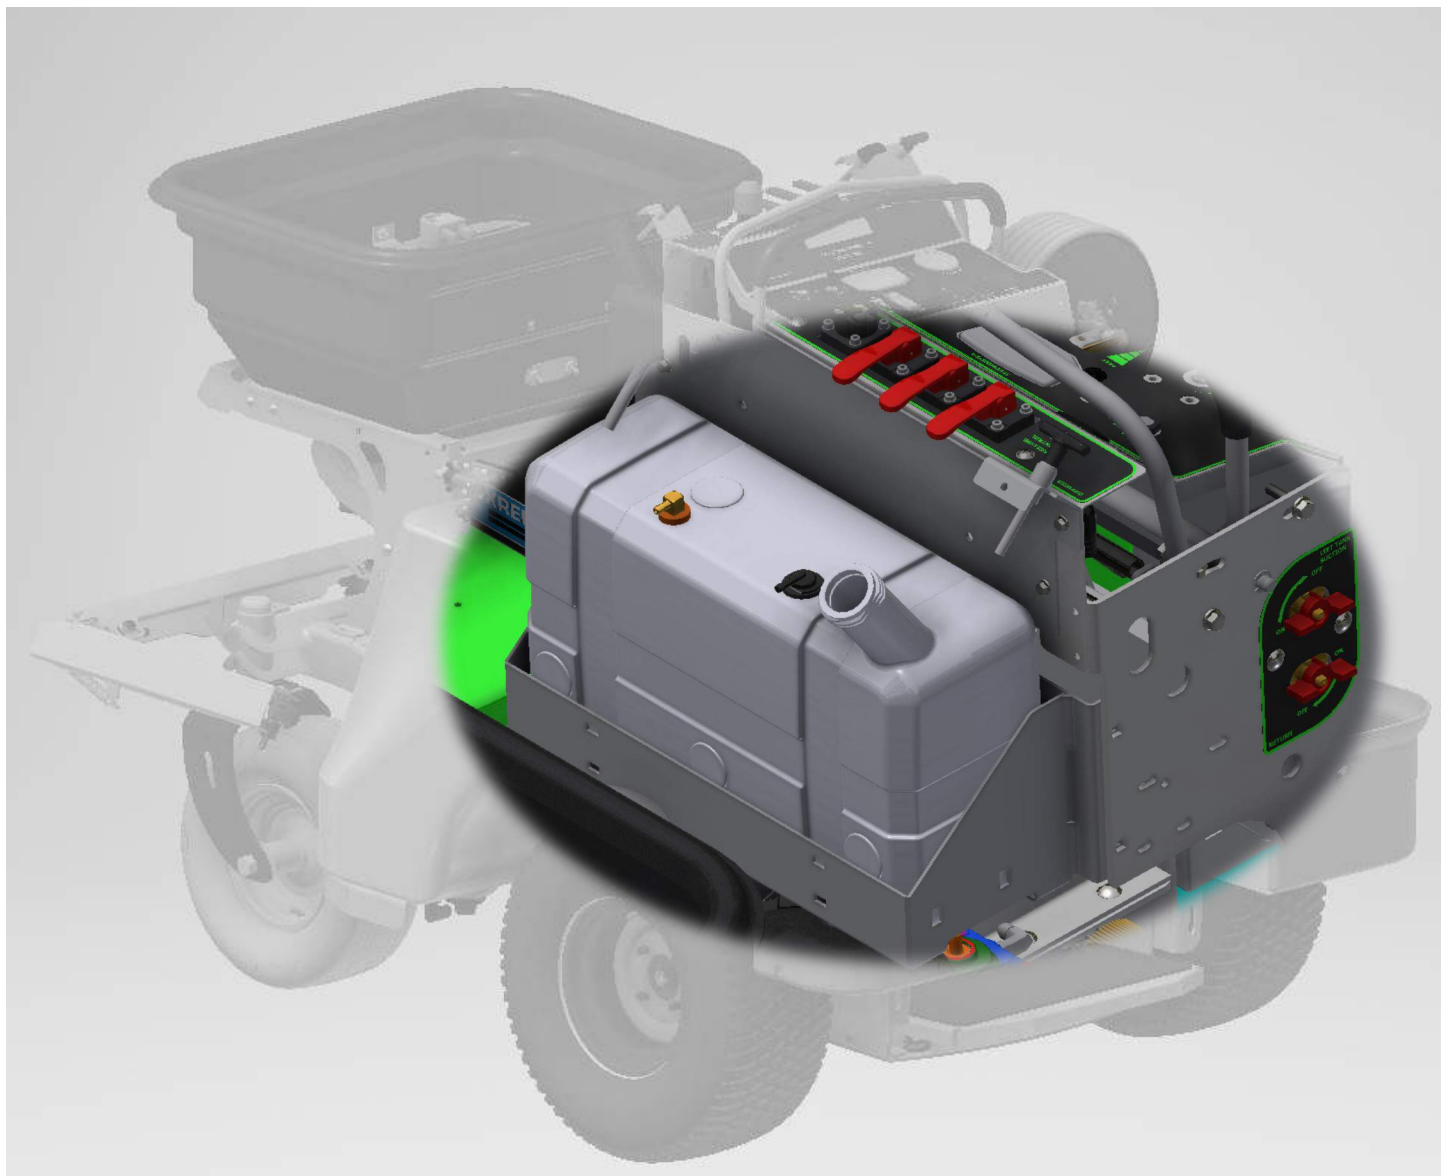

GAS TANK SWAP INSTRUCTIONS

STEP ONE: Disconnect the battery, *ground* first and then *power* wire.



GROUND

POWER

STEP TWO:

- Squeeze the hose clamp and slide it back.
- Disconnect both fuel lines.

Engine supply line

Pressure relief



CAUTION!

-Beware of excess fuel in the lines.


-Fuel spillage.

WARNING!


-Flammable gas.

GAS TANK SWAP INSTRUCTIONS

STEP THREE: Disconnect the gas tank straps and remove the tank.

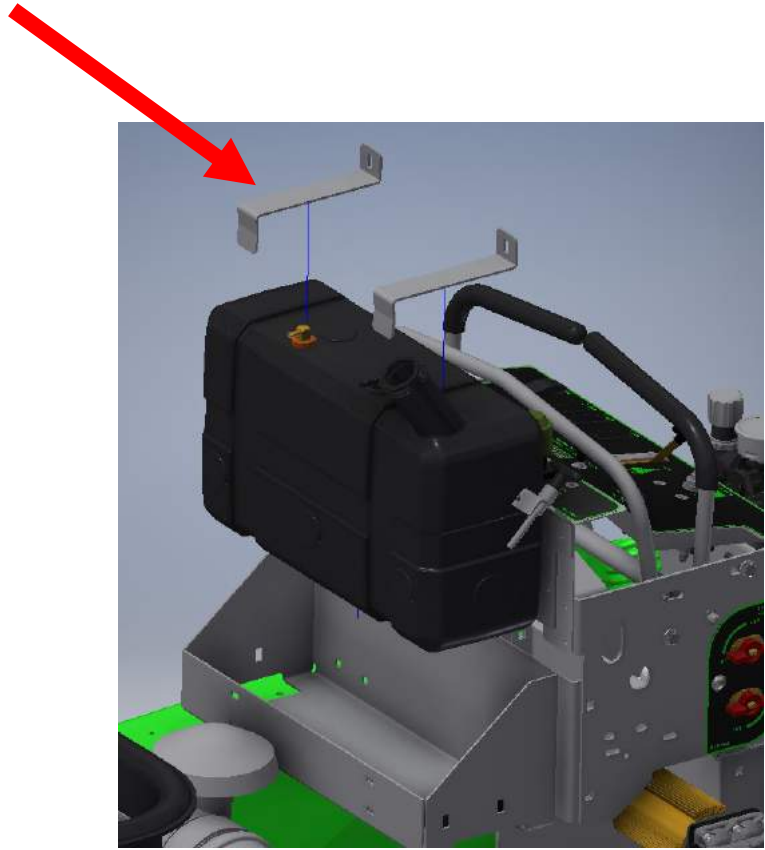

STEP FOUR: Install the new white gas tank and reattach the tank straps.

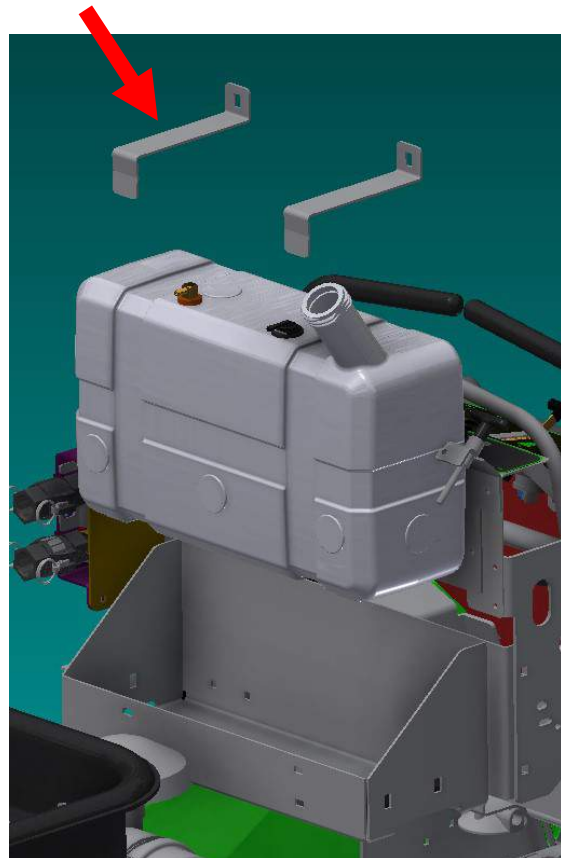

GAS TANK SWAP INSTRUCTIONS

STEP FIVE: Reattach the fuel lines and secure the hose clamp.



STEP SIX: Reconnect the battery, *power wire* first and then *ground*.



GROUND

POWER



MADE IN THE USA

Steel Green Mfg.
920 S State Road 39
Lebanon, IN 46052
(756)-481-2890
www.steelgreenmfg.com

SG GAS TANK SWAP