

INSTRUCTION MANUAL


7 GAL. INDEPENDENT SPRAYER

Models: SG46, & SG52






7 GAL. INDEPENDENT SPRAYER EXPLODED VIEW ,LEFT SIDE

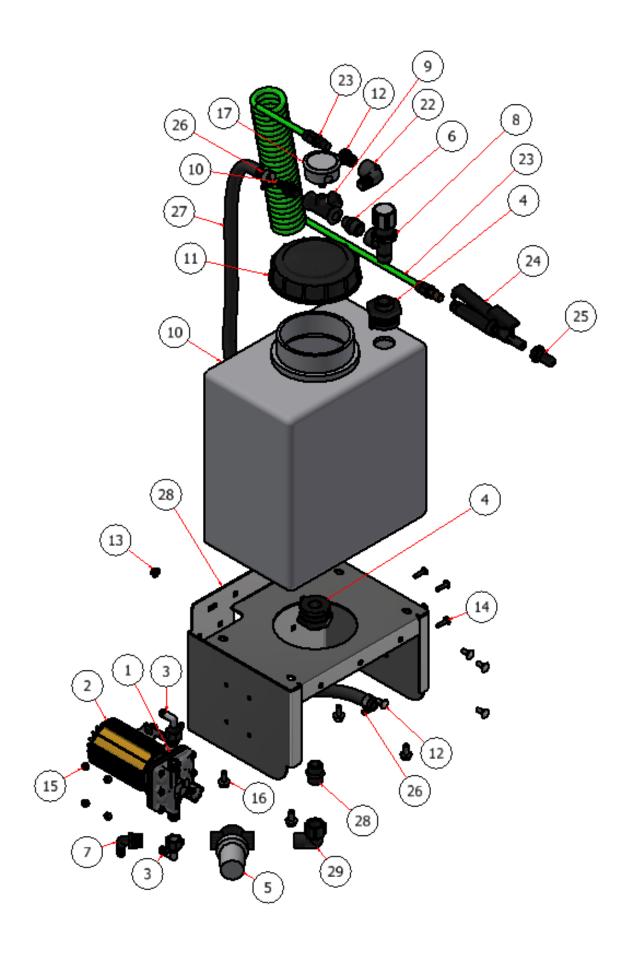

7 GAL. INDEPENDENT SPRAYER EXPLODED VIEW, LEFT SIDE

PARTS LIST				
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	S54000	PUMP, SHURFLO	
2	1	S54120	HEAT SINK, SPRAY PUMP	
3	2	S54103	PUMP FITTING, BARB, ELBOW, 1/2 X 1/2	
4	2	S51242	BULKHEAD FITTING, TANK	
5	1	S51270	SPRAY FILTER	
6	1	S52063	3/4 X 3/4 ST	
7	1	S52028	ELBOW, 3/4 X 1/2 BARB	
8	1	S51283	VALVE, THROTTLING	
9	1	S52000	TEE, PIPE, 3/4 WITH GAUGE PORT	
10	1	M10007-L-IND	TANK, 7 GALLON	
11	1	S51243	CAP, TANK	
12	4	CB-51634	CARRIAGE BOLT, SS - 5/16-18 x 3/4	
13	4	HFNCS-516S	HEX FLANGE NUT, SS - 5/16-18	
14	4	TRPC-141S	PHILLIPS SCREW, SS - 1/4-20 x 1	
15	4	SSNNC-14	NYLOCK, SS - 1/4-20	
16	4	HFSSC-3875	HEX BOLT, 3/8 X 3/4	
17	1	S51234-D	PRESSURE GAUGE, 60 PSI	
18	1	R21-113	ANTI VORTEX PLATE	
19	1	S53019	HOSE,COIL	
20	1	S51260	HANDLE, SPRAY	
21	1	S52041	90 ELBOW, 3/4 MNPT X 3/4 FNPT	
22	4	MS4	HOSE CLAMP, 3/8	
23	1	S51261	NOZZLE, SPRAY	
24	1	S52013	1/2 MNPT X 1/2 HOSE BARB	
25	1	S52064	3/4 X 1/2 REDUCER	
26	1	S52040	1/2" 90° Street Elbow	
27	1	S52050	1/2 X 1/4	
28	1	W22-183	TANK SUPPORT, 7 GAL. SG46/52	

7 GAL. INDEPENDENT SPRAYER EXPLODED VIEW, RIGHT SIDE

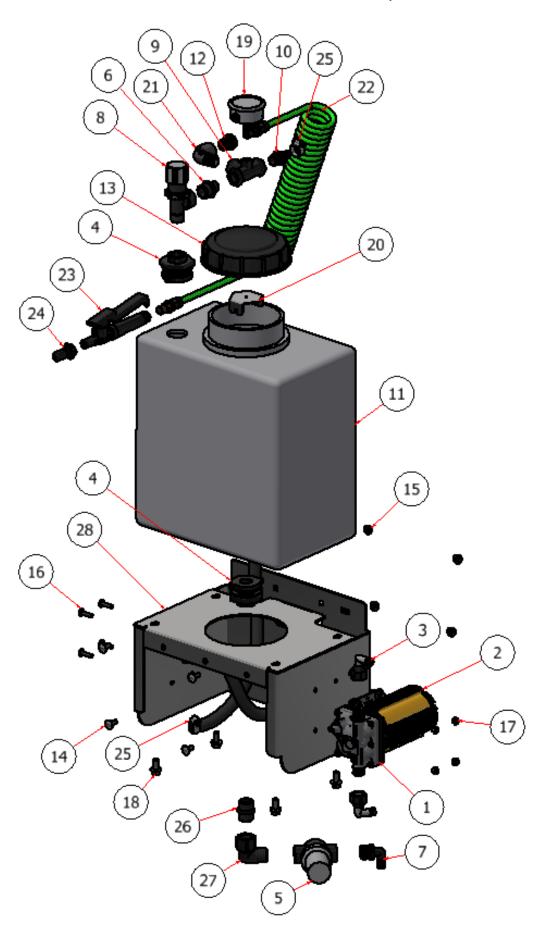

7 GAL. INDEPENDENT SPRAYER EXPLODED VIEW, RIGHT SIDE


PARTS LIST				
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	S54000	PUMP, SHURFLO	
2		S54120	HEAT SINK	
3		S54103	ELBOW FITTING 90DEG. BARB	
4		S51242	TANK BULKHEAD FITTING	
5		S51270	SPRAY FILTER	
6	1	S52064	3/4 X 1/2 REDUCER	
7		S52028	90DEG5008 .750T	
8	1	S51283	REGULATER	
9	1	S52000	PIPE TEE	
10	1	S52013	1/2 MNPT X 1/2 HOSE BARB	
11	1	M1007	M1007-R-IND	
12	1	S52050	1/2 X 1/4	
13	1	S51243	TANK CAP	
14		CB-51634	CARRIAGE BOLT, SS - 5/16-18 x 3/4	
15	4	HFNCS-516S	HEX FLANGE NUT, SS - 5/16-18	
16	4	TRPC-141S	PHILLIPS SCREW, SS - 1/4-20 x 1	
17	4	SSNNC-14	NYLOCK, SS - 1/4-20	
18	4	HFSSC-3875	HEX BOLT, 3/8 X 3/4	
19	1	S51234-D	PRESSURE GAUGE, 60 PSI	
20	1	R21-113	ANTI VORTEX PLATE	
21	1	S52040	1/2" 90° Street Elbow	
22	1	S53019	HOSE,COIL	
23		S51260	HANDLE, SPRAY	
24	1	S51261	NOZZLE, SPRAY	
25	4	MS4	HOSE CLAMP, 3/8	
26	50	S52063	3/4" X 3/4" ST.	
27		S52041	PIPE ELBOW 90 DEG.	
28	1	W22-183	TANK SUPPORT, 7 GAL. SG46/52	


STEP ONE: Disconnect the battery, *ground* first and then *power* wire.



NOTE: Steps 2 & 3 instructions are the same for the right and left side, if both left & right side tanks are being installed.

STEP TWO: Remove existing storage container and support bracket from the frame.

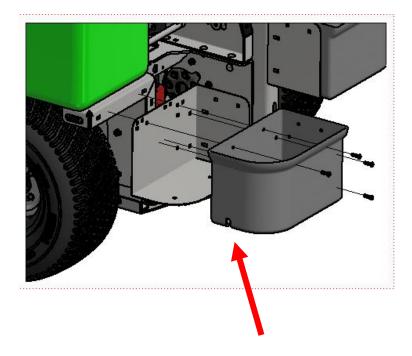

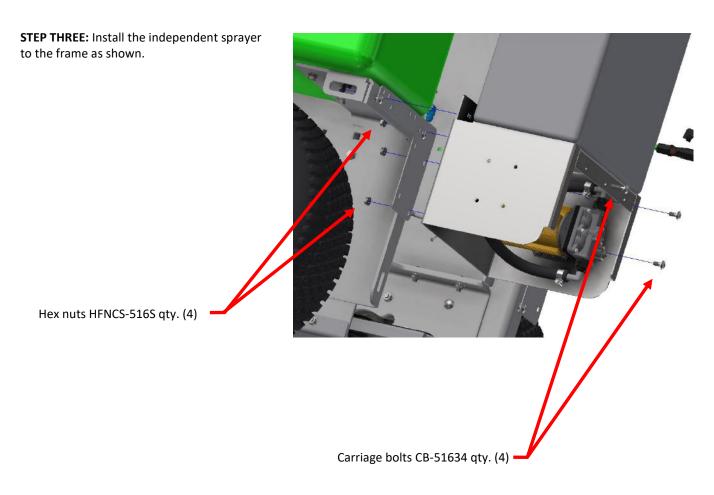


STEP FOUR: Connect the "pump" wiring harness to the pump plug and route the harness between the tank and upright.





STEP FIVE: Route the "pump" wiring harness along the frame and upright to the control panel.

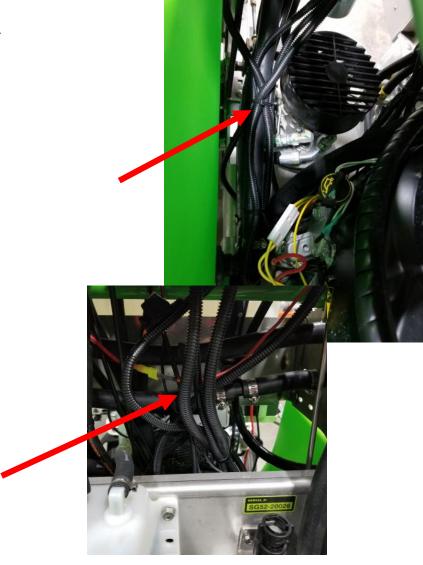

STEP SIX: Remove the plastic cap from "Aux 1" in the panel and route the switch connector of the "pump" wiring harness through the hole in the panel.



STEP SEVEN: Connect the "pump" wiring harness to the "20A" side of the rocker switch.



STEP EIGHT: Connect the ground wire from the "pump" wiring harness to the up right cross member.



STEP NINE: Connect the "pump power" wiring harness to the other side of the rocker switch.




STEP TEN: Install the rocker switch in the control panel and route the "pump power" wiring harness down the up right, along the frame to the battery.




STEP ELEVEN: Reconnect the battery, *power* wire first along with the *pump power wire* from the wiring harness, and then reconnect the *ground* wire.



STEP TWELVE: Once both harnesses are routed and connected, securely fasten them to the frame and existing harnesses in the up right with zip ties.

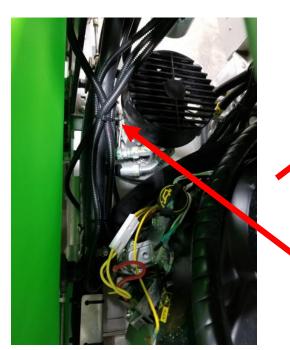

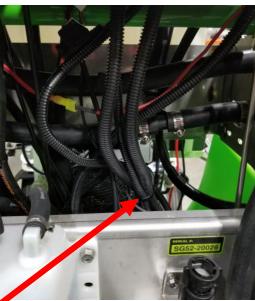





MADE IN THE USA

Steel Green Mfg. 920 S State Road 39 Lebanon, IN 46052 (765)-481-2890