


INSTRUCTION MANUAL

VIBRATION BRACKET

Models: SG52

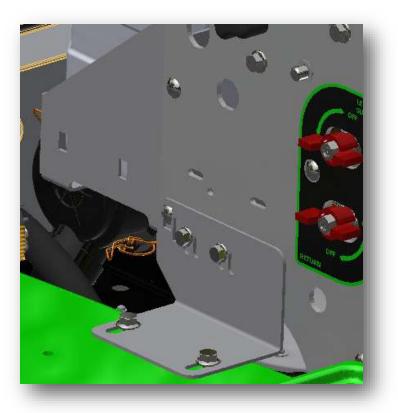

PLEASE NOTE


The supplied vibration brackets **MUST** be installed or warranty will be void.



SG52 VIBRATION BRACKET INSTRUCTIONS


NOTE: *Instructions are the same for both right & left sides.*


STEP ONE: Remove the safety shield from the tank support.

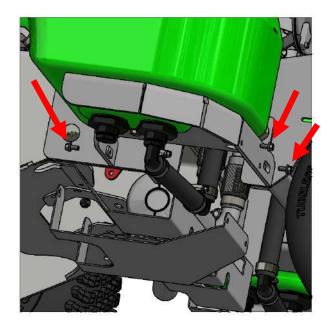

STEP TWO: Loosen the four tank bolts on the front & 3 tank bolts on the rear, *do not completely remove the bolts.*


NOTE: *If necessary , remove the rear tire for easier access.*

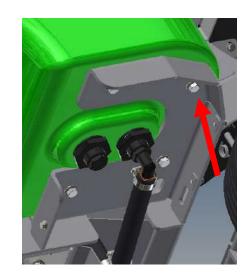

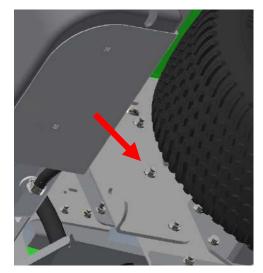

	VIBRATION BRACKET KIT					
ITEM	PART NUMBER	QTY.	DESCRIPTION			
1	R21-166	1	VIBRATION BRACKET			
2	R21-166-L	1	VIBRATION BRACKET, LEFT			
3	HFSSC-3813	4	HEX BOLT, 3/8" X 3/4"			
4	HFSSC-51675	4	HEX BOLT, 5/16" X 3/4"			
5	CB-3751SS	2	CARRIAGE BOLT, 3/8 X 1			
6	HFNCS-516S	4	HEX NUT, 5/16			


SG52 VIBRATION BRACKET INSTRUCTIONS

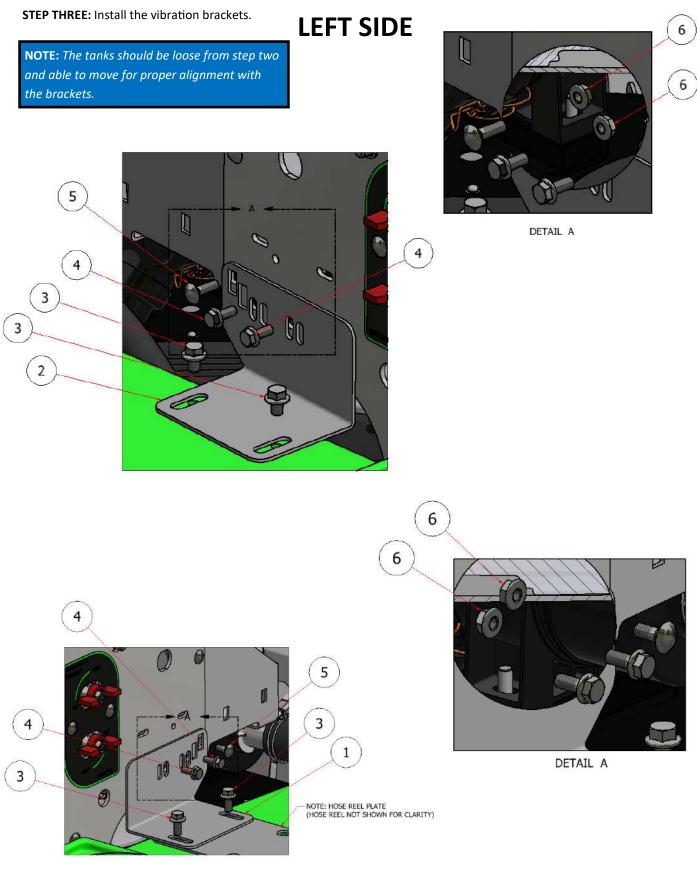


RIGHT SIDE


SG52 VIBRATION BRACKET INSTRUCTIONS

STEP FOUR: Tighten the four tank bolts on the front & 3 tank bolts on the rear.

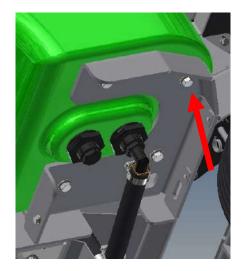

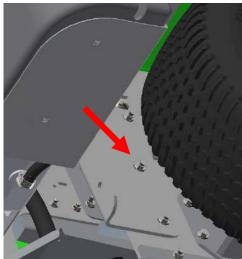

STEP FIVE: Reattach the safety shield to the tank support.

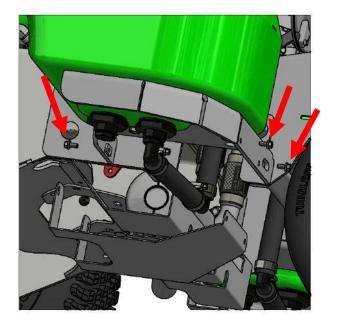



Steel Green Mfg. 824 S State Road 39 Lebanon, IN 46052 (756)-481-2890 www.steelgreenmfg.com

MANUAL PART NO.	MANUAL REV.	DESCRIPTION
SGM-013	В	SG52 VIBRATION BRACKET