


UPPER DASH PANEL ASSEMBLY SGXL

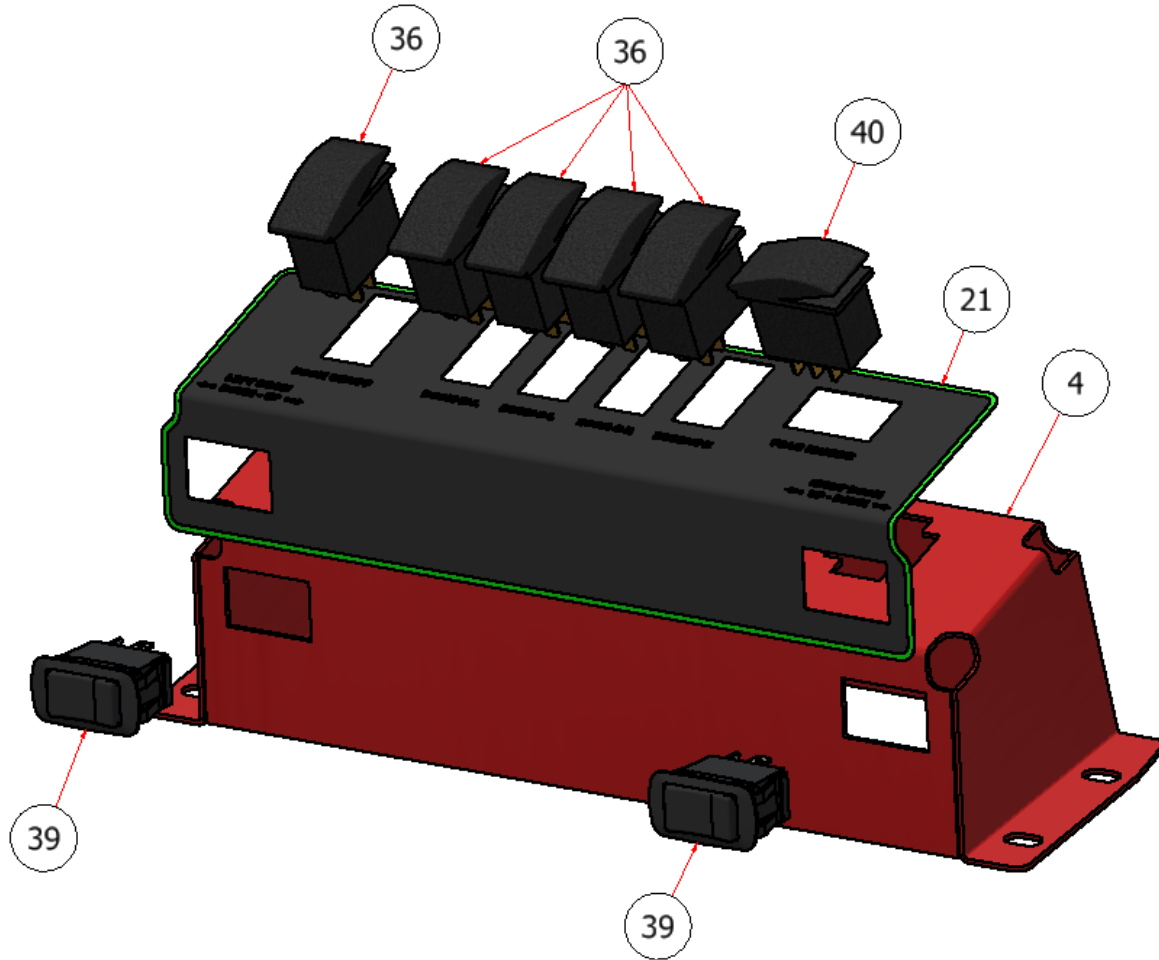

| PARTS LIST | | | |
|------------|-----|-------------|---------------------------------------|
| ITEM | QTY | PART NUMBER | DESCRIPTION |
| 4 | 1 | R23-043-01 | SWITCH PANEL, UPPER, SGXL |
| 21 | 1 | GCMD-001 | DECAL, UPPER DASH, SGXL |
| 36 | 8 | E40202 | ROCKER SWITCH |
| 39 | 2 | RS-57014-3 | ROCKER SWITCH. MOMENTARY OF MOMENTARY |
| 40 | 1 | RS-6P | ROCKER SWITCH, ON OFF ON |

| EXPLODED VIEW | | |
|---------------|------|--------------------------------|
| PART NO. | REV. | DESCRIPTION |
| SGXLEV-004 | A | UPPER DASH PANEL ASSEMBLY SGXL |