


8 PORT FUSE PANEL

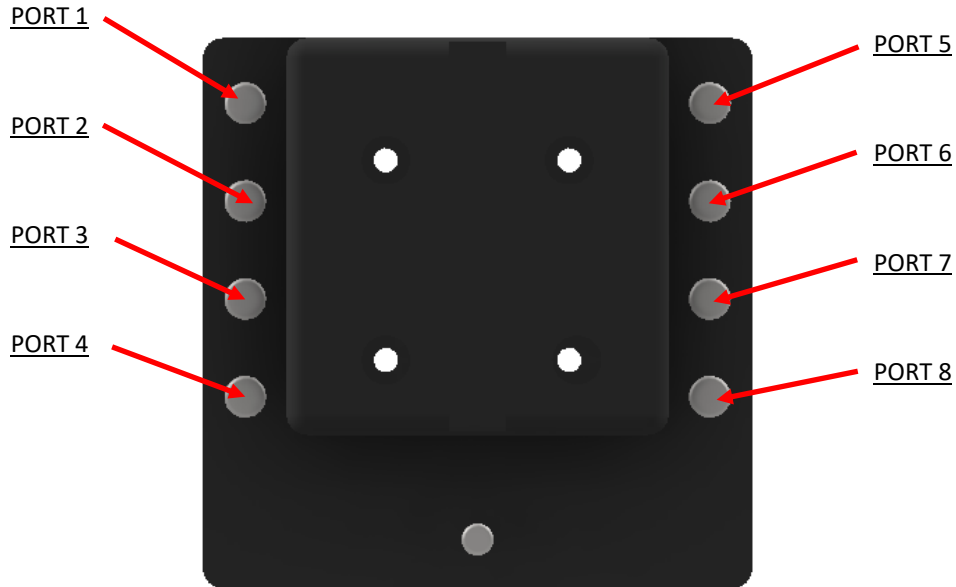


PORT	SG SERIES FUSE BLOCK		PORT
1	SPRAY PUMP (1) 25 AMP	USB PORT 5 AMP	5
2	SPRAY PUMP (2) 25 AMP	SPRAY PUMP SWITCH 25 AMP	6
3	7 GAL. LEFT 25 AMP	SPEEDOMETER 1 AMP	7
4	7 GAL. RIGHT 25 AMP	FOAM MARKER 25 AMP, HSA 10 AMP, HEADLIGHT, 10 AMP	8

j	SG54 FUSE BLOCK		PORT
1	7 GAL. LEFT 25 AMP	HSA 10 AMP	5
2	7 GAL. RIGHT 25 AMP	USB PORT 5 AMP	6
3	SPRAY BOOM 30 AMP	SPRAY PUMP 20 AMP	7
4	FOAM MARKER 25 AMP	FOOT SWITCH 25 AMP	8

PORT	SGXL FUSE BLOCK		PORT
1	HSA 10 AMP	OIL COOLER 10 AMP	5
2	FOAM MARKER 25 AMP	BOOM NOZZLE SOLENOIDS 30 AMP	6
3	BOOM - RAISE & LOWER 30 AMP	SPRAY PUMP 20 AMP	7
4	BOOM - RAISE & LOWER 30 AMP	HEADLIGHT 20 AMP	8

10 PORT FUSE PANEL

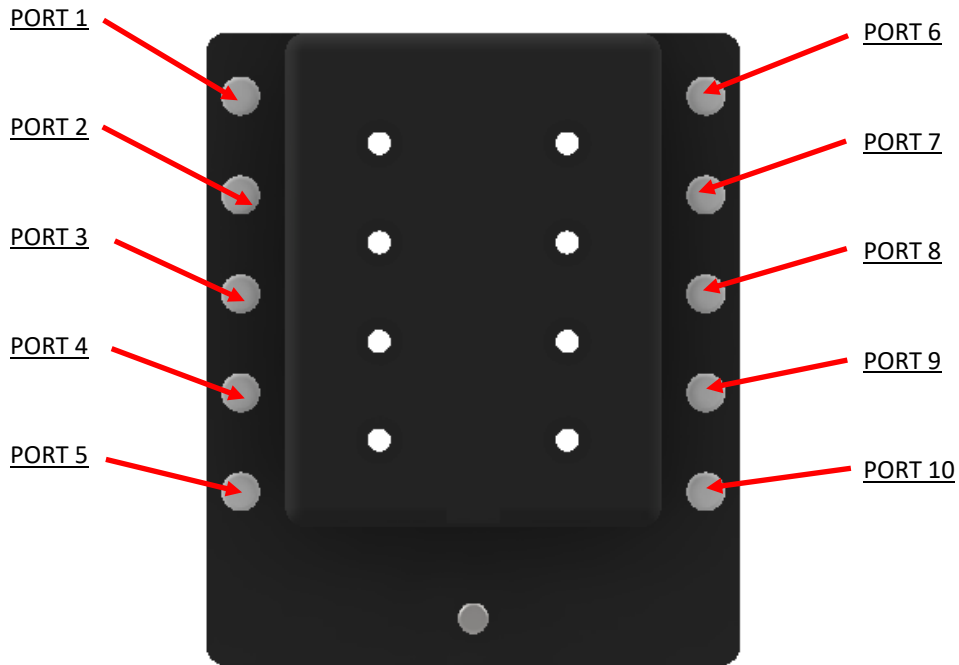

PORT	SG SERIES FUSE BLOCK		PORT
1	SPRAY PUMP 1 25 AMP	USB PORT 5 AMP	6
2	SPRAY PUMP 2 25 AMP	SPRAY PUMP SWITCH 25 AMP	7
3	7 GAL. LEFT 25 AMP	SPEEDOMETER 1 AMP	8
4	7 GAL. RIGHT 25 AMP	FOAM MARKER 25 AMP	9
5	HSA 10 AMP	HEADLIGHT 10 AMP	10

PORT	SG54 FUSE BLOCK		PORT
1	7 GAL. LEFT 25 AMP	HSA 10 AMP	6
2	7 GAL. RIGHT 25 AMP	USB PORT 5 AMP	7
3	SPRAY BOOM 30 AMP	SPRAY PUMP 20 AMP	8
4	FOAM MARKER 25 AMP	FOOT SWITCH 25 AMP	9
5			10

PORT	SGXL FUSE BLOCK		PORT
1	HSA 10 AMP	OIL COOLER 10 AMP	6
2	FOAM MARKER 25 AMP	BOOM NOZZLE SOLENOIDS 30 AMP	7
3	BOOM - RAISE & LOWER 30 AMP - RIGHT	SPRAY PUMP 20 AMP	8
4	BOOM - RAISE & LOWER 30 AMP - LEFT	HEADLIGHT 20 AMP	9
5	HOPPER VIBRATOR		10