

STEELGREEN[™]

MANUFACTURING

INSTRUCTION MANUAL

ENGINE OIL CHANGE

Models: SG36, SG42, SG46, & SG52




ENGINE OIL CHANGE INSTRUCTIONS

STEP 1: Loosen and remove the engine oil “dip stick”.

NOTICE

Change engine oil & filter every 100 hours with 5w50 full synthetic oil, API service classification SN, Resource conserving; ILSAC GF-5.

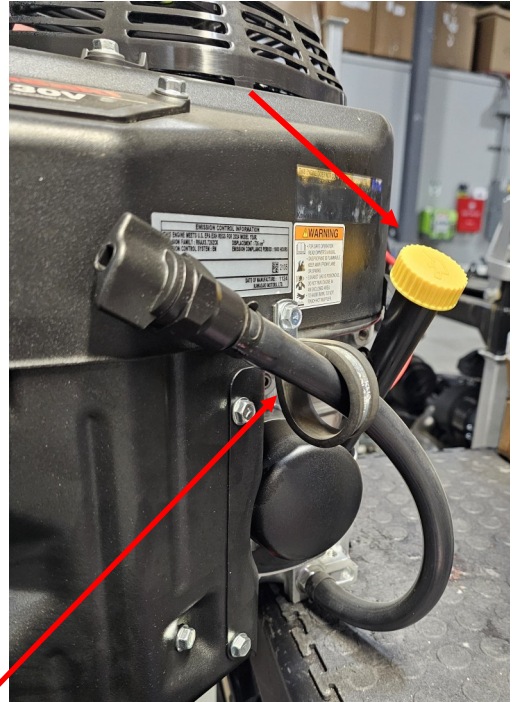


STEP 2:

- Remove the engine oil drain hose from the loop clamp.

NOTICE

For Briggs & Honda engines, remove the drain hose from the clip.

- Place the hose over a proper container, remove the plug to drain the engine oil.
- Once the oil has been drained, reinstall the plug and reattach the hose.


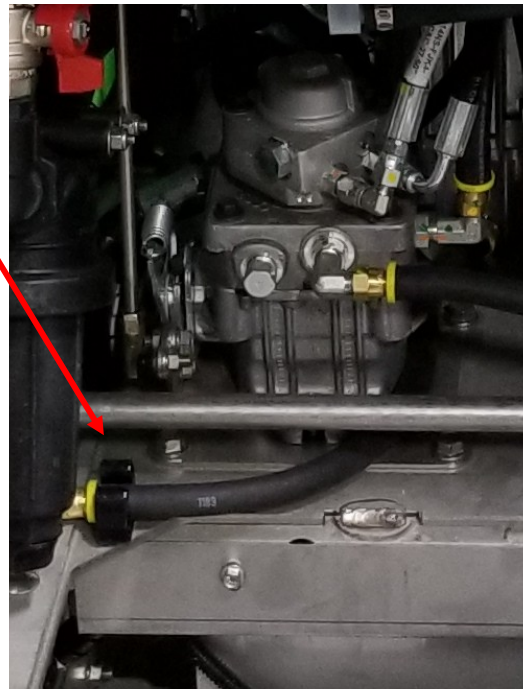


ENGINE OIL CHANGE INSTRUCTIONS

STEP 3: Remove and replace the engine oil filter.


NOTICE

SG36 unit for easier access to the engine oil filter, remove the left rear tire.

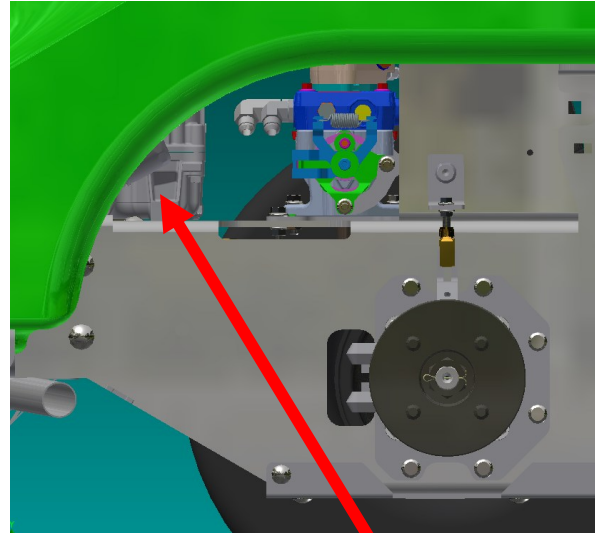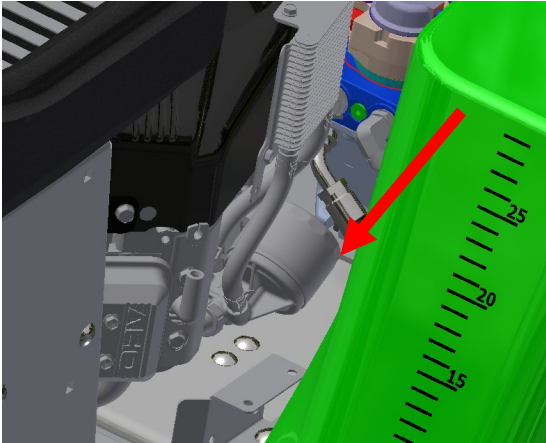

OIL FILTER

STEP 4: Refill the engine oil to the proper level (1.75Qts. MAX.) with 5w50 full synthetic oil.

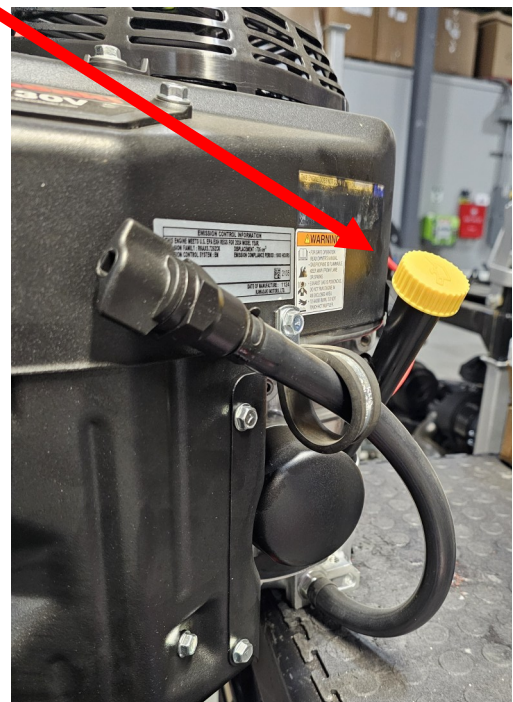



Steel Green Mfg.
824 S State Road 39
Lebanon, IN 46052
(765)-481-2890
www.steelgreenmfg.com

MANUAL PART NO.	MANUAL REV.	DESCRIPTION
SGM-017	4	ENGINE OIL CHANGE