


STEELGREEN[™]

M A N U F A C T U R I N G

INSTRUCTION MANUAL

HYDRAULIC OIL CHANGE

Models: SG54

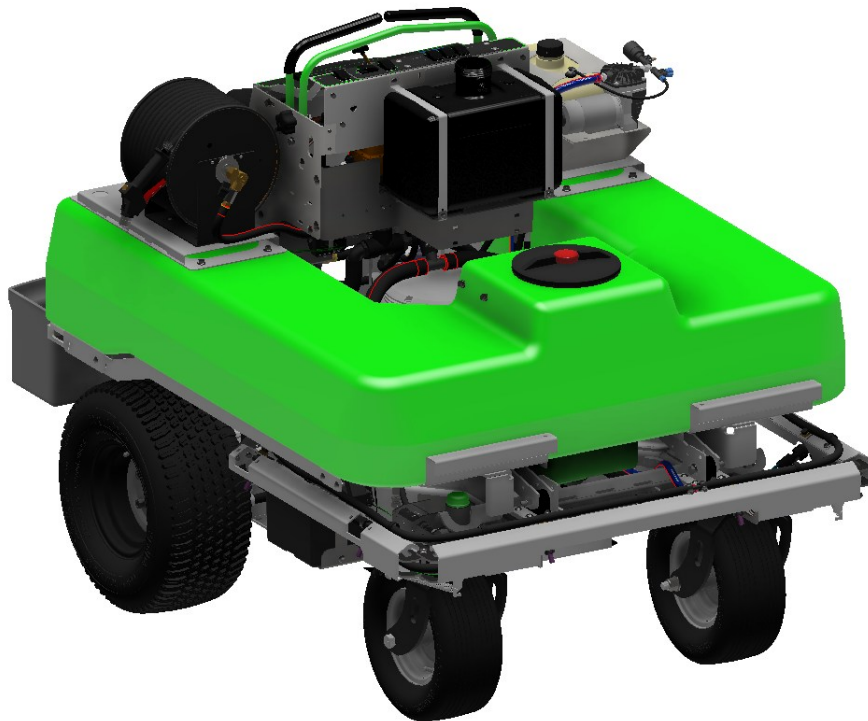


SG54 HYDRAULIC OIL CHANGE INSTRUCTIONS

STEP 1: Remove the knee pad to access the hydraulic oil reservoir.



NOTICE

Change hydraulic oil and filter every 500 hours with 5w50 full synthetic oil. API service classification SN, Resource conserving; ILSAC GF-5.

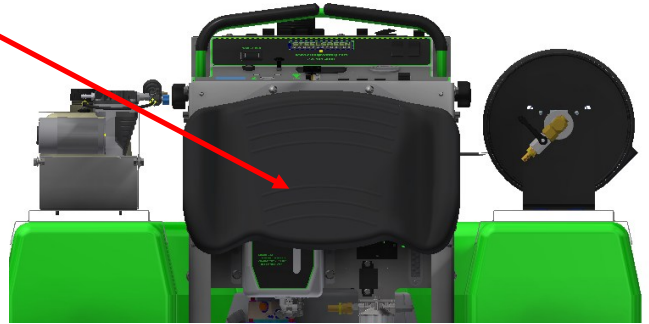


STEP 2:

- Loosen and remove the cap from the hydraulic oil reservoir.
- Disconnect the rear hoses from the hydraulic pumps, place the hoses over a proper container draining the hydraulic oil.
- Once the oil has been drained, reconnect the hoses to the pumps.
- To drain the most oil out as possible, remove the rear tires & disconnect the hoses from the wheel motors to drain the oil at the lowest point.

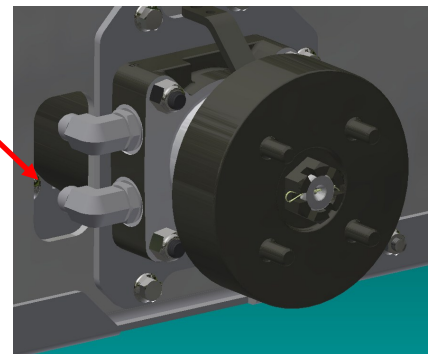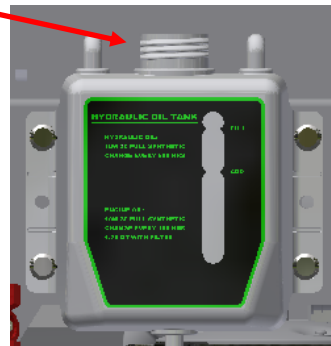


SG54 HYDRAULIC OIL CHANGE INSTRUCTIONS

STEP 3: Remove and replace the hydraulic oil filter.

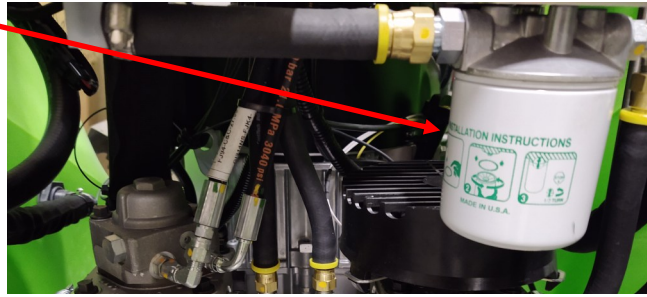

STEP 4:

- Refill the hydraulic oil to the full line. with 5w50 full synthetic oil.
- Jack up the rear of the machine so the rear tires are off of the ground.
- Start and run the machine in forward and reverse to cycle the hydraulic oil back through the system, *you will see the oil level drop in the reservoir.*
- Once the oil level has dropped, refill the reservoir to the full line and reinstall the cap.

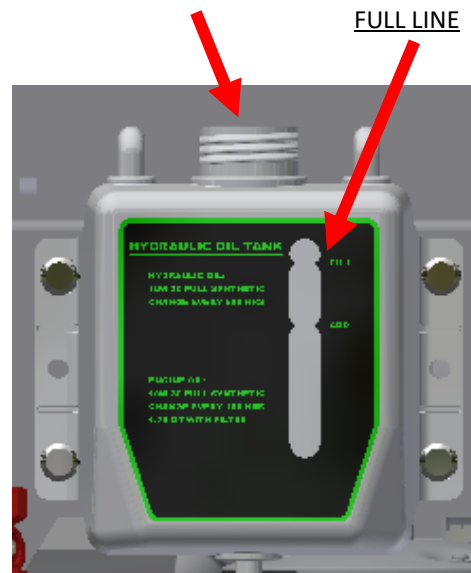



Steel Green Mfg.
824 S State Road 39
Lebanon, IN 46052
(765)-481-2890
www.steelgreenmfg.com

MANUAL PART NO.	MANUAL REV.	DESCRIPTION
SGM-051	2	SG54 HYDRAULIC OIL CHANGE