



# **INSTRUCTION MANUAL**

# **35 GALLON TANK ATTACHMENT**

**Models:** SG46, & SG52



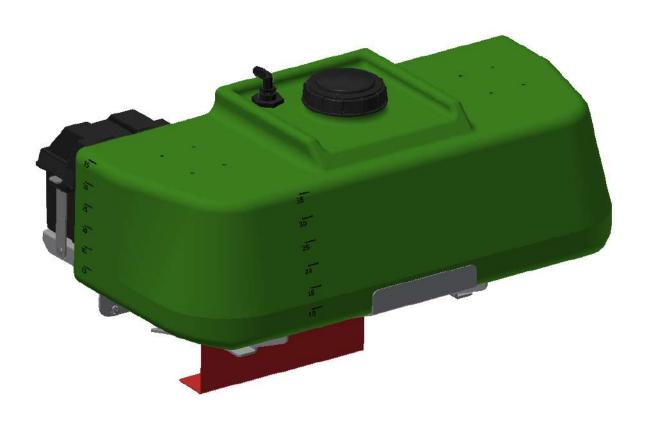

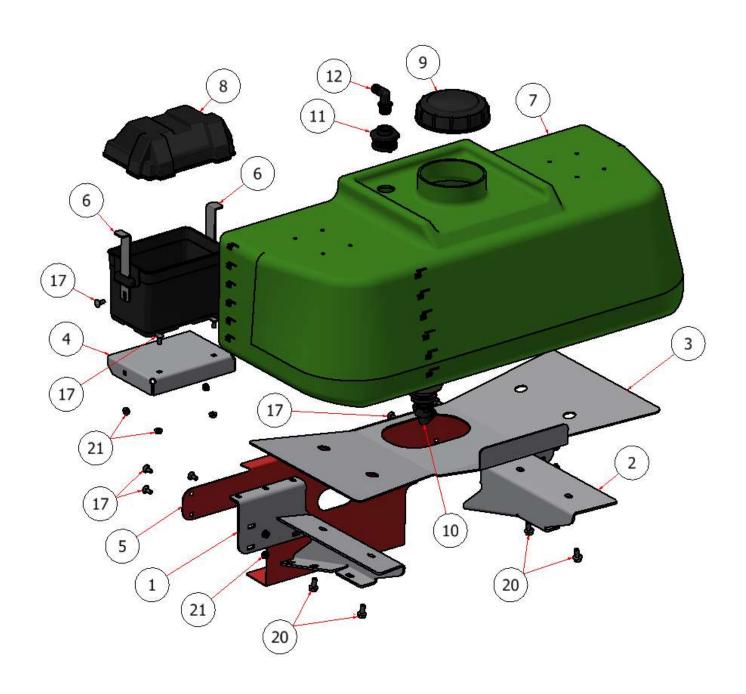

PARTS LIST							
ITEM	QTY	PART NUMBER	DESCRIPTION				
1	1	R22-150-01	TANK SUPPORT BRACKET, 35 GAL., RIGHT				
2	1	R22-150_MIR	TANK SUPPORT BRACKET, 35 GAL., LEFT				
3	1	R22-151	TANK PLATE, 35 GAL.				
4	1	R22-152	BATTERY BOX SUPPORT, 35 GAL.				
5	1	R22-160-01	FERT SHIELD, 35 GAL.				
6	2	R21-214	BRACKET, BATTERY BOX				
7	1	M10035-A	TANK, 35 GALLON				
8	2	E40002	BATTERY BOX				
9	1	S51243	CAP, TANK				
10	1	S52200	KIT, BULKHEAD, 3/4				
11	1	S51242	BULKHEAD FITTING, TANK				
12	1	S52029	BARB, 3/4 MPT x 3/4 BARB 90				
13	1	W21-100	MOUNTING BRACKET, SPRAY PUMP				
14	1	S54000	PUMP, SHURFLO				
15	1	S54120	HEAT SINK, SPRAY PUMP				
16	2	S54102	PUMP FITTING, BARB, ELBOW, 1/2 X 3/4				
17	10	CB-51634	CARRIAGE BOLT, SS - 5/16-18 x 3/4				
18	4	HFSSC-141	HEX FLANGE BOLT, 1/4 X 1				
19	4	HFSSC-3812	HEX FLANGE BOLT, 3/8 X 1/2				
20	4	HFSSC-3875	HEX BOLT, 3/8 X 3/4				
21	10	HFNCS-516S	HEX NUT 5/16				

#### **STEP ONE:**

- Disconnect the battery, *ground* first and then *power* wire.
- Remove the battery from the battery box.




**STEP TWO:** Disconnect the hoses from the hopper and connect them to the circulation fitting.

**NOTE:** Hold the hoses up to prevent oil spillage




**STEP THREE:** Disconnect the cables from the dash.

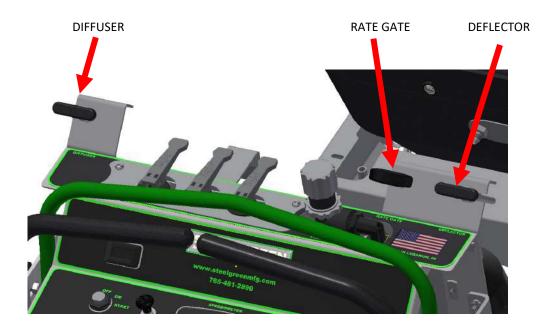

**NOTE:** Be sure the hopper is empty before proceeding.

**STEP FOUR:** Remove the six bolts that hold the hopper assembly to the frame and lift the hopper assembly from the frame.

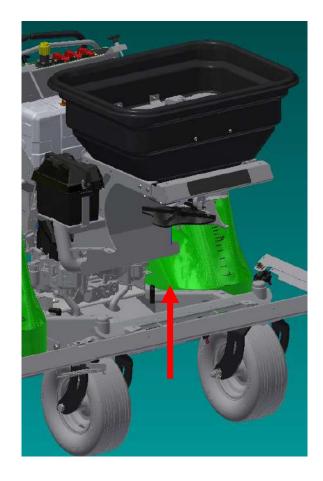

#### STEP FIVE:

- Set the 35 gallon tank assembly on the frame.
- Attach it to the frame with the six bolts.





#### **VALVE ASSEMBLY**



**STEP SIX:** Remove the (2) bolts that secure the gas tank support and Attach the valve assembly to the *left* side of the upright.

#### **VALVE ASSEMBLY W/FOAM MARKER**

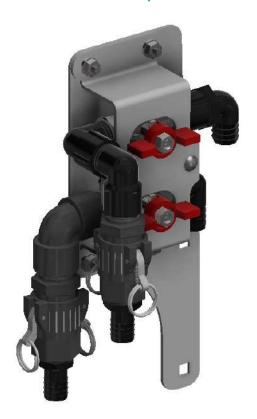

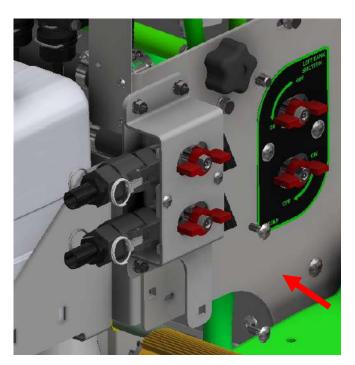


### NOTE:

- Before beginning step seven, BE SURE there is no pressure on the lines and fluid is drained.
- Parts removed for clarity.

#### **STEP SEVEN:**


- Remove the knee pad to access the return & suction lines.
- Carefully cut and install the "tee" fittings in the "suction" and "return" lines as shown (blue arrows). Securely fasten with 3/4 hose clamps.

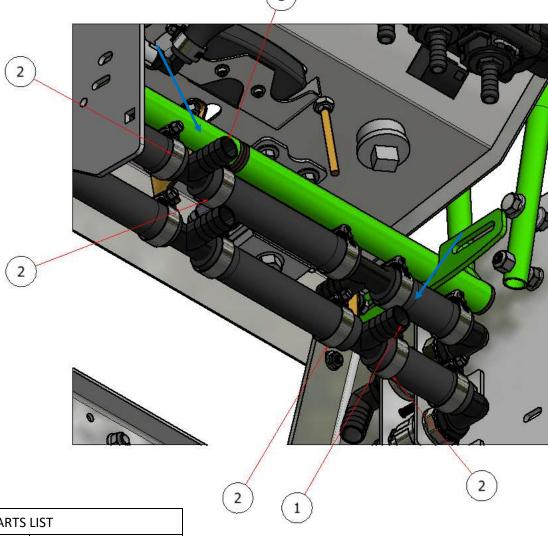


PARTS LIST									
ITEM	TEM QTY PART NUMBER		DESCRIPTION						
1	4	12HS	HOSE CLAMP, 3/4						
2	2	S50062	TEE FITTING, 3/4 HOSE						

STEP EIGHT:

- Cut and install 3/4" suction hose, connecting one end to the suction fitting on the top valve and the other end to the "tee" fitting in the suction line.
- Cut and install 3/4" return hose, connecting one end to the return fitting on the bottom valve and the other end to the "tee" fitting in the return line.
- Securely fasten each end with 3/4" hose clamp.

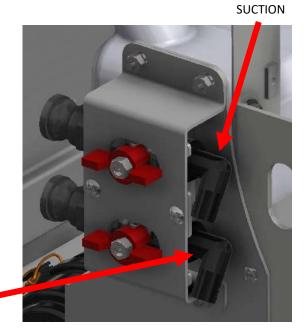


**RETURN** 

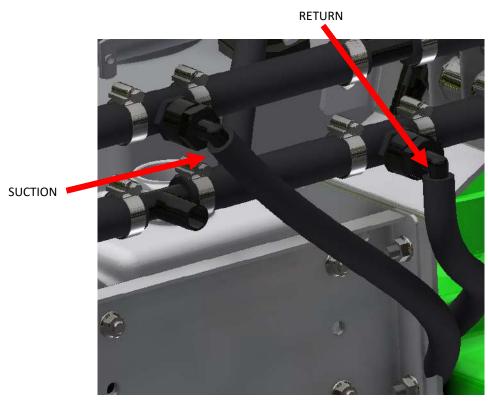

STEP NINE: Connect the "quick disconnect" hoses from the tank to the valves.

Top valve is SUCTION.

Bottom valve is RETURN.

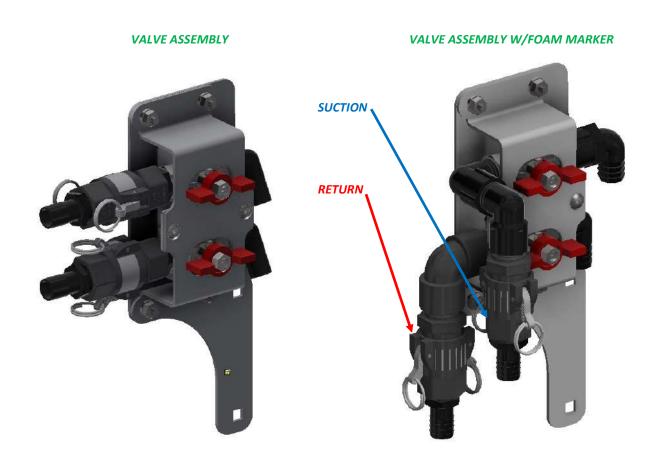

#### STEP TEN:

- Set the battery in the battery box.
- Reconnect the battery cables, power cable and wires first followed by the ground wire.
- Attach the battery box cover and bungie strap.





Steel Green Mfg. 824 S State Road 39 Lebanon, IN 46052 (765)-481-2890

www.steelgreenmfg.com

MANUAL	MANUAL	DESCRIPTION	KIT
PART NO.	REV.		PART NO.
SGM-008	В	35 GALLON TANK ATTACHMENT	